

---

## (Mute and) Pattern selection trick : Help

Posted by Syl KougaÃ - 2010/11/05 22:28

---

" This works in a similar way with the pattern selection also. If you hold down the bank button (A,B,C,D...) then press function, then release the bank button, then release function, the available patterns will remain selectable until you choose one (instead of just a couple of seconds) or press the exit button. I always found it hard to change patterns if i was tweaking the knobs but not anymore!! "

I was reading the updated "tips and tricks" by Tarekith and remember this trick that I was not able to acheive by the past. I re-tried to do that and I don't know why, but it did'nt work for me :dry:

Does it work for you ?

=====

## Re:(Mute and) Pattern selection trick : Help

Posted by Syl KougaÃ - 2010/11/08 05:08

---

Please give me an answer, does it work for someone ?

Do I miss something ?

Thanks.

=====

## Re:(Mute and) Pattern selection trick : Help

Posted by data-line - 2010/11/08 05:17

---

yep, this used to work but it does not now, i guess it was ditched in one of the OS updates...

=====

## Re:(Mute and) Pattern selection trick : Help

Posted by Syl KougaÃ - 2010/11/08 08:20

---

data-line wrote:

yep, this used to work but it does not now, i guess it was ditched in one of the OS updates...

Oh... :S

It could be a cool feature, may be it cause some problems so...

=====